



# LED PowerBlinder 8

ORDERCODE 41321



**SHOWELECTRONICS FOR PROFESSIONALS**

## **Congratulations!**

You have bought a great, innovative product from Showtec.

The Showtec LED PowerBlinder brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: [iwant@showtec.info](mailto:iwant@showtec.info)

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



**Warning**..... 2

    Safety-instructions..... 2

    Operating Determinations..... 3

    Rigging..... 4

**Description**..... 5

    Features and Overview ..... 5

    Backside..... 6

**Installation**..... 6

**Set Up and Operation**..... 6

    Stand-alone ..... 7

    DMX Mode..... 8

        Mode 1 - 16 Channels..... 8

        Mode 2 - 10 Channels..... 10

        Mode 3 - 7 Channels..... 11

        Mode 4 Built-in Programs..... 12

        Mode 5 Sound-active..... 13

**Maintenance**..... 14

    Changing the Fuse..... 14

**Troubleshooting**..... 14

**Product Specifications**..... 15

## WARNING



**CAUTION!**  
Keep this device away from rain and moisture!



**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE YOUR INITIAL START-UP!**

## SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.**  
With a dangerous voltage you can suffer  
a dangerous electric shock when touching the wires!



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

### **IMPORTANT:**

*The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.*

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never leave any cables lying around.
- Never look directly into the light source.
- Never use the device during thunderstorms, unplug the device immediately.
- Do not insert objects into air vents.
- Do not open the device and do not modify the device.
- Do not connect this device to a dimmerpack.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Do not switch the device on and off in short intervals, as this would reduce the system's life.
- Only use device indoor, avoid contact with water or other liquids.
- Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.

- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- Make sure that no side forces can impact on the truss system.
- The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to deadly electrical shocks.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. The device must be installed out of the reach of children. Never leave the unit running unattended.
- The user is responsible for correct positioning and operating of the LED PowerBlinder. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- For replacement use fuses of same type and rating only.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



**CAUTION ! EYEDAMAGES !.**  
**Avoid looking directly into the light source.**  
**(meant especially for epileptics) !**



## OPERATING DETERMINATIONS

This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.

The minimum distance between light-output and the illuminated surface must be more than 0,5 meters.

The maximum ambient temperature  $t_a = 45^{\circ}\text{C}$  must never be exceeded.

The relative humidity must not exceed 50 % with an ambient temperature of  $45^{\circ}\text{C}$ .

If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.

Any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.

*You endanger your own safety and the safety of others!*

## Rigging

*Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.*

*Do not attempt the installation yourself !*

*Always let the installation be carried out by an authorized dealer !*

### Procedure:


- If the LED PowerBlinder is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the LED PowerBlinder, with the mounting-bracket, to the trussing system.
- The LED PowerBlinder must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the LED PowerBlinder, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

*Improper installation can cause serious damage to people and property !*

## Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

Cable	Pin	International
BROWN	FASE	L
BLUE	NUL	N
YELLOW/GREEN	EARTH	

Make sure that the device is always connected properly to the earth!

## Description of the device

### Features

The LED PowerBlinder is a LED system from Showtec.

- Ultra bright LED
- 96X 1W High Power LED's (32x Red, 32x green and 32x Blue)
- Reflected beam angle 25°
- LED Lifetime 100.000 hours
- Colour mixing system RGB
- Protocol DMX512, 16, 10 or 7 channels
- 3 Stand alone modes, controlled by audio or manual speed
- DMX Connection XLR 3-pins
- Aluminium with black finish
- Internal microphone
- Including 100cm power cable including power plug
- Transmit cooling
- Unlimited colors
- Low power consumption
- No Ultra Violet
- Adjustable hanging brackets included
- Maximum ambient temperature +50 degrees

NOTE: Knowledge of DMX is required to fully utilize this unit.

### Overview



Fig. 1

## Backside


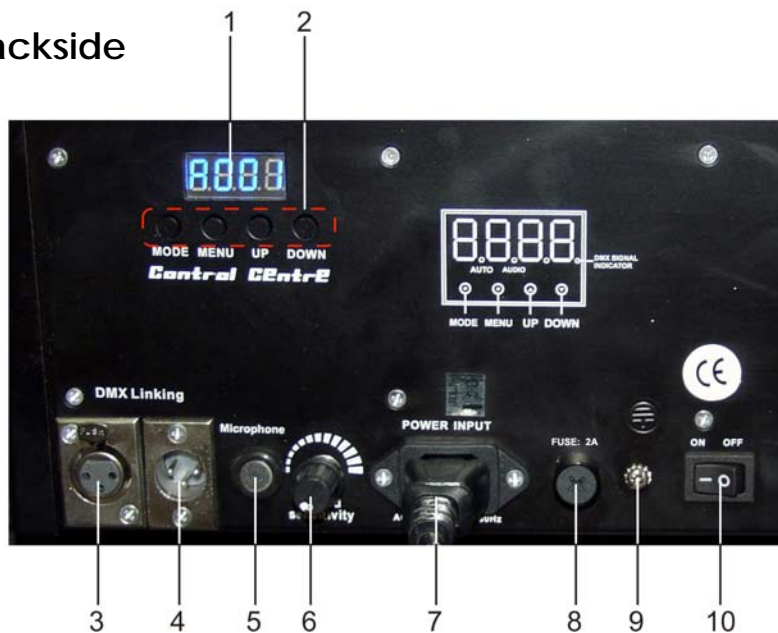


Fig. 2


- 1) LCD Display
- 2) Functions: Mode, Menu, Up, Down
- 3) 3-pin DMX signal connector (OUT)
- 4) 3-pin DMX signal connector (IN)
- 5) Microphone
- 6) Audio Sensitivity
- 7) IEC Connector
- 8) Fuse 2A
- 9) Earth
- 10) ON / OFF



When the display shows  
the Powerblinder is in auto Mode.

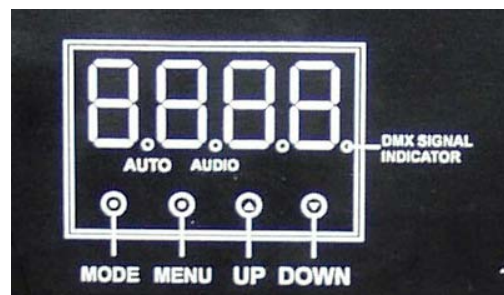

When the display shows  
the Powerblinder is sound-active.

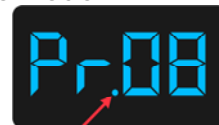

**Note:** The position of the **point** shows which mode is active.  
Before the r (Auto); after r (Audio)

## Installation

Remove all packing materials from the LED PowerBlinder. Check that all foam and plastic padding is removed. Connect all cables.

**Always disconnect from electric mains power supply before cleaning or servicing.**  
**Damages caused by non-observance are not subject to warranty.**

## Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

**Note :** Link all cables before connecting electric power.



## FUNCTIONS:

There are 2 options for using the LED PowerBlinder: Stand-alone  
DMX Mode

## Stand-alone

In Stand-alone mode, you can use the menu button on the back of the device to scroll through the options.

A001	000-512	DMX Channel setting
P.r01	P.r01-P.r12	Programs 1-12
d000	d000-d255	Dimmer
F000	F000-F255	Fade
S000	S000-S255	Speed
t000	t000-t255	Strobe Programs

## Strobe Programs **E000-E255**

0000-0015	Open
0016-0041	Strobe 1-20 Hz
0042-0050	Strobe effect 1 (Rainbow + Slow Fade-in Strobe)
0051-0060	Strobe effect 2 (Rainbow + Mid-speed Fade-in Strobe)
0061-0070	Strobe effect 3 (Rainbow + Fast Fade-in Strobe)
0071-0080	Strobe effect 4 (Rainbow + Slow Fade-out Strobe)
0081-0090	Strobe effect 5 (Rainbow + Mid-speed Fade-out Strobe)
0091-0100	Strobe effect 6 (Rainbow + Fast Fade-out Strobe)
0101-0110	Strobe effect 7 (Slow random Strobe)
0111-0120	Strobe effect 8 (Mid-speed random Strobe)
0121-0130	Strobe effect 9 (Fast random Strobe)
0131-0155	No Strobe

## DMX Mode



The LED Powerblinder will automatically detect the presence of a DMX signal.

If a DMX signal is present, the DMX LED will blink.

In order to receive a DMX signal, the controller must be attached to a DMX controller by a 3-pin DMX cable and the DMX controller must be turned on.

The LED PowerBlinder system can operate as a 16-, 10-, or 7-channel DMX fixture.

### Channel 1 – Mode Options

0-15	Off
16-49	Mode 1 (16 DMX Channels)
50-99	Mode 2 (10 DMX Channels)
100-149	Mode 3 (7 DMX Channels)
150-199	Mode 4 (Built-in Programs Auto-run)
200-255	Mode 5 (Sound-active)

With the first channel, you can set how many channels you want to use, by choosing your desired mode.

Example: When you want to use 16 channels, you select Mode 1.

**Note:** For the Strobe to function, you have to set the dimmer to open and you select which Spot section you want to strobe.

### Mode 1 - 16 Channels (Channel 1 must be set to 16-49)

#### Channel 2 – No Function

#### Channel 3 – Strobe

0-15	Open
16-141	Strobe 1-20 Hz
142-150	Strobe effect 1 (Rainbow + Slow Fade-in Strobe)
151-160	Strobe effect 2 (Rainbow + Mid-speed Fade-in Strobe)
161-170	Strobe effect 3 (Rainbow + Fast Fade-in Strobe)
171-180	Strobe effect 4 (Rainbow + Slow Fade-out Strobe)
181-190	Strobe effect 5 (Rainbow + Mid-speed Fade-out Strobe)
191-200	Strobe effect 6 (Rainbow + Fast Fade-out Strobe)
201-210	Strobe effect 7 (Slow random Strobe)
211-220	Strobe effect 8 (Mid-speed random Strobe)
221-230	Strobe effect 9 (Fast random Strobe)
231-255	No Strobe

**Channel 4 – Dimmer**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 5 – Red Dimmer Spot 1**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 6 – Green Dimmer Spot 1**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 7 – Blue Dimmer Spot 1**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 8 – Red Dimmer Spot 2**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 9 – Green Dimmer Spot 2**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 10 – Blue Dimmer Spot 2**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 11 – Red Dimmer Spot 3**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 12 – Red Dimmer Spot 3**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 13 – Red Dimmer Spot 3**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 14 – Red Dimmer Spot 4**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 15 – Green Dimmer Spot 4**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

**Channel 16 – Blue Dimmer Spot 4**

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

## Mode 2 - 10 Channels (Channel 1 must be set to 50-99)

### Channel 2 – No Function

### Channel 3 – Strobe

0-15	Open
16-141	Strobe 1-20 Hz
142-150	Strobe effect 1 (Rainbow + Slow Fade-in Strobe)
151-160	Strobe effect 2 (Rainbow + Mid-speed Fade-in Strobe)
161-170	Strobe effect 3 (Rainbow + Fast Fade-in Strobe)
171-180	Strobe effect 4 (Rainbow + Slow Fade-out Strobe)
181-190	Strobe effect 5 (Rainbow + Mid-speed Fade-out Strobe)
191-200	Strobe effect 6 (Rainbow + Fast Fade-out Strobe)
201-210	Strobe effect 7 (Slow random Strobe)
211-220	Strobe effect 8 (Mid-speed random Strobe)
221-230	Strobe effect 9 (Fast random Strobe)
231-255	No Strobe

### Channel 4 – Dimmer

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 5 – Red Dimmer Spot 1 + 2

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 6 – Green Dimmer Spot 1 + 2

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 7 – Blue Dimmer Spot 1 + 2

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 8 – Red Dimmer Spot 3 + 4

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 9 – Green Dimmer Spot 3 + 4

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 10 – Blue Dimmer Spot 3 + 4

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

## Mode 3 - 7 Channels (Channel 1 must be set to 100-149)

### Channel 2 – No Function

### Channel 3 – Strobe

0-15	Open
16-141	Strobe 1-20 Hz
142-150	Strobe effect 1 (Rainbow + Slow Fade-in Strobe)
151-160	Strobe effect 2 (Rainbow + Mid-speed Fade-in Strobe)
161-170	Strobe effect 3 (Rainbow + Fast Fade-in Strobe)
171-180	Strobe effect 4 (Rainbow + Slow Fade-out Strobe)
181-190	Strobe effect 5 (Rainbow + Mid-speed Fade-out Strobe)
191-200	Strobe effect 6 (Rainbow + Fast Fade-out Strobe)
201-210	Strobe effect 7 (Slow random Strobe)
211-220	Strobe effect 8 (Mid-speed random Strobe)
221-230	Strobe effect 9 (Fast random Strobe)
231-255	No Strobe

### Channel 4 – Dimmer

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 5 – Red Dimmer Spot 1 - 4

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 6 – Green Dimmer Spot 1 - 4

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 7 – Blue Dimmer Spot 1 - 4

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

## Mode 4 Built-in Programs (Channel 1 must be set to 150-199)

### Channel 2 – Colors

0-22	RGB rolling
23-45	RGBW flowing
46-68	WRGB flow recycle
69-91	WRGB chase
92-114	Each two spot-section has a WRGB chase
115-137	Red (all spots)
138-160	Green (all spots)
161-183	Blue (all spots)
184-206	Yellow (all spots)
207-229	Purple (all spots)
230-252	Cyan (all spots)
253-255	White (all spots)

### Channel 3 – Strobe

0-15	Open
16-141	Strobe 1-20 Hz
142-150	Strobe effect 1 (Rainbow + Slow Fade-in Strobe)
151-160	Strobe effect 2 (Rainbow + Mid-speed Fade-in Strobe)
161-170	Strobe effect 3 (Rainbow + Fast Fade-in Strobe)
171-180	Strobe effect 4 (Rainbow + Slow Fade-out Strobe)
181-190	Strobe effect 5 (Rainbow + Mid-speed Fade-out Strobe)
191-200	Strobe effect 6 (Rainbow + Fast Fade-out Strobe)
201-210	Strobe effect 7 (Slow random Strobe)
211-220	Strobe effect 8 (Mid-speed random Strobe)
221-230	Strobe effect 9 (Fast random Strobe)
231-255	No Strobe

### Channel 4 – Dimmer

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 5 – Fade time

0-255	Fade Time, from slow to fast (0-100%)
-------	---------------------------------------

### Channel 6 – Chase Time

0-255	Chase Time, from slow to fast (0-100%)
-------	--

## Mode 5 Sound-active (Channel 1 must be set to 200-255)

### Channel 2 – Colors

0-22	RGB rolling
23-45	RGBW flowing
46-68	WRGB flow recycle
69-91	WRGB chase
92-114	Each two spot-section has a WRGB chase
115-137	Red (all spots)
138-160	Green (all spots)
161-183	Blue (all spots)
184-206	Yellow (all spots)
207-229	Purple (all spots)
230-252	Cyan (all spots)
253-255	White (all spots)

### Channel 3 – Strobe

0-15	Open
16-141	Strobe 1-20 Hz
142-150	Strobe effect 1 (Rainbow + Slow Fade-in Strobe)
151-160	Strobe effect 2 (Rainbow + Mid-speed Fade-in Strobe)
161-170	Strobe effect 3 (Rainbow + Fast Fade-in Strobe)
171-180	Strobe effect 4 (Rainbow + Slow Fade-out Strobe)
181-190	Strobe effect 5 (Rainbow + Mid-speed Fade-out Strobe)
191-200	Strobe effect 6 (Rainbow + Fast Fade-out Strobe)
201-210	Strobe effect 7 (Slow random Strobe)
211-220	Strobe effect 8 (Mid-speed random Strobe)
221-230	Strobe effect 9 (Fast random Strobe)
231-255	No Strobe

### Channel 4 – Dimmer

0-255	Dimmer, from closed to open (0-100%)
-------	--------------------------------------

### Channel 5 – Fade time

0-255	Fade Time, from slow to fast (0-100%)
-------	---------------------------------------

### Channel 6 – Chase Time

0-255	Chase Time, from slow to fast (0-100%)
-------	--

## Maintenance

The LED PowerBlinder requires almost no maintenance. However, you should keep the unit clean. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

### Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a screwdriver into the slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push a bit (Turn and Push). The fuse will come out.
3. Remove the broken fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover.  
Be sure to use a fuse of the same type and specification. See the product specification label for details.

## Troubleshooting

### Showtec LED PowerBlinder

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the light effect does not operate properly, refer servicing to a technician.

1. If the device does not operate properly, unplug the device.
2. Check the fuse, power from the wall, all cables etc.
3. If all of the above appears to be O.K., plug the unit in again.
4. If you are unable to determine the cause of the problem, do not open the LED PowerBlinder, as this may damage the unit and the warranty will become void.
5. Return the device to your Showtec dealer.



## Product Specification

Model: Showtec LED PowerBlinder

96pcs 1W Power LED's

Power Supply 230V Ac/50Hz

Power Input 0.33A at 230V

Fuse: 2A

96 LEDs (32 Red, 32 Green, 32 Blue)

Beam angle: 25°

LED Lifetime: 100.000 hours

Colour mixing system RGB

Protocol DMX512: 16CH, 10 CH or 7 Channels

3 Stand alone modes, controlled by audio or manual speed

DMX Connection XLR 3-pins

Aluminium with black finish

Internal microphone

Including 100cm power cable including power plug

Transmit cooling

Ambient temperature 0°C/40°C

Dimensions: 860 x 460 x 102 mm (LxWxH)

Weight 9.6 Kg



Design and product specifications are subject to change without prior notice.



Website: [www.Highlite.nl](http://www.Highlite.nl)

Email: [service@highlite.nl](mailto:service@highlite.nl)





© 2007 Showtec.